

ANI-15115-08MTH

PDU: Total Current Monitoring
INSTRUCTION MANUAL



A-Neutronics, Inc.



SAFETY INFORMATION



1. To ensure the best results from this product, please read this manual and all other documentation before operating your equipment. Retain all documentation for future reference.
2. Follow all instructions printed on unit chassis for proper operation.
3. To reduce the risk of fire, do not spill water or other liquids into or on the unit, or operate the unit while standing in liquid.
4. Make sure power outlets conform to the power requirements listed on the back of the unit. Keep unit protected from rain, water and excessive moisture.
5. Do not attempt to clean the unit with chemical solvents or aerosol cleaners, as this may damage the unit. Dust with a clean dry cloth.
6. Do not use the unit if the electrical power cord is frayed or broken. The power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
7. Do not force switched or external connections in any way. They should all connect easily, without needing to be forced.
8. Always operate the unit with the AC ground wire connected to the electrical system ground. Precautions should be taken so that the means of grounding of a piece of equipment is not defeated.
9. AC voltage must be correct and the same as that printed on the rear of the unit. Damage caused by connection to improper AC voltage is not covered by any warranty.
10. Turn power off and disconnect unit from AC current before making connections.
11. Never hold a power switch in the "ON" position.
12. This unit should be installed in a cool dry place, away from sources of excessive heat, vibration, dust, moisture and cold. Do not use the unit near stoves, heat registers, radiators, or other heat producing devices.
13. Do not block fan intake or exhaust ports. Do not operate equipment on a surface or in an environment which may impede the normal flow of air around the unit, such as a bed, rug, carpet, or completely enclosed rack. If the unit is used in an extremely dusty or smoky environment, the unit should be periodically "blown free" of foreign dust and matter.
14. To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside. Refer all servicing to qualified service personnel. There are no user serviceable parts inside.
15. When moving the unit, disconnect input ports first, then remove the power cable; finally, disconnect the interconnecting cables to other devices.
16. Do not drive the inputs with a signal level greater than that required to drive equipment to full output.
17. The equipment power cord should be unplugged from the outlet when left unused for a long period of time.
18. Save the carton and packing material even if the equipment has arrived in good condition. Should you ever need to ship the unit, use only the original factory packing.
19. Service Information Equipment should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged.
 - B. Objects have fallen, or liquid has been spilled into the equipment.
 - C. The equipment has been exposed to rain.
 - D. The equipment does not appear to operate normally, or exhibits a marked change in performance.
 - E. The equipment has been dropped, or the enclosure damaged.

TABLE OF CONTENTS

CONTENTS

Introduction	1
Features & Specifications	2
Function	3
Installation	4
Web Interface	5

INTRODUCTION

The ANI-15115-08MTH PDU is an internet ready device designed and equipped with an intelligent current-meter (True RMS) that will indicate the total power consumption of the power strip. This PDU offers an easy set up and user-friendly communication software. This software provides the ability to remotely monitor and evaluate current power consumption.

The ANI-15115-08MTH provides total PDU current monitoring solution via the front panel LED display, an IP connection or a serial connection for out of band access.

While this PDU does not offer any outlet control, it will allow remote current monitoring with peace of mind that the outlets cannot be disabled.

This unit comes with a 2 year warranty.

INCLUDED

The standard PDU package contains a Power Distribution Unit with supporting hardware. The components of the package are:

- Power Distribution Unit
- Rack mount Brackets (rack screws not provided)
- Quick Start Guide

AVAILABLE FOR DOWNLOAD

MIB: Management Information Base for Network.

http://www.a-neutronics.com/Software/ANI-15115-08xxx_MIB.zip

PDU Software: PDU Utility zip file.

http://www.a-neutronics.com/Software/ANI-15115-08xxx_PDU-Utility.zip

Or visit our website [A-Neutronics.com](http://www.a-neutronics.com) to download directly from the product page.

SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply. Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

DISCLAIMERS

The information in this manual has been carefully checked and is believed to be accurate. We assume no responsibility for any infringements of patents or other rights of third parties which may result from its use.

We assume no responsibility for any inaccuracies that may be contained in this document. We make no commitment to update or to keep current the information contained in this document.

We reserve the right to make improvements to this document and/or product at any time and without notice.

COPYRIGHT NOTICE

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means — electronic, mechanical, magnetic, optical, chemical, manual, or otherwise — without express written permission and consent.

© Copyright 2021. All Rights Reserved.

Version 1.5 AUG 2021

TRADEMARK ACKNOWLEDGMENTS

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.

FEATURES & SPECIFICATIONS

FEATURES


- Built-in web server manager monitors the current consumption of the power strip in real time
- Built-in true RMS current meter
- Easy setup, meter can be read directly or via the IP address
- Homepage support SSL
- Provides audible alarm when the power consumption goes beyond the threshold of warning and overload
- Sends an email and traps when the power consumption exceeds the trigger value of warning or overload to the PDU
- Provided software utility, it can monitor multiple PDU's at the same time
- Supports SNMP and provides MIB for the PDU to be monitored by NMS
- Provides per outlet power protection by the circuit breaker
- Current Meter: Digital True
- RMS Current Meter
- Power Monitor: Total Power
- Monitoring by Meter, Web, SNMP, Free Bundle Software
- Protocols: HTTP, HTTPS, SNMP, DHCP, UDP
- Alarm Thresholds: User-Defined Alarm Thresholds for Warning and Overload
- Event Alert: Email, Trap, Audible Alarm

SPECIFICATIONS

- **Overall Length:** 19 in (with rack mount)
- **Number of Receptacles:** (8) front
- **Cord Length:** 10 ft
- **Mounting Type:** Flange, Removable (rack mounting screws not provided)
- **Approval:** UL Approved
- **Maximum Rating:** 60HZ, 15A, 120V
- **Unit Color:** Black
- **Housing:** Steel
- **Type of Receptacle:** NEMA 5-1520R (15A 125V) Black Outlet
- **Circuit Breaker:** 15 amp
- **Cord Type:** 14/3 SJT
- **Type of Plug:** NEMA 5-15P (15A 125V) Molded on Plug
- **Color of Cord:** Black
- **Cord Location:** Exits the rear of the housing
- **Temperature:** 0°- 40°C / 32°-104°F
- **Humidity:** 0% - 90% RTH
- **Resolution:** 0.1A
- **Nominal Input Voltage:** 115V
- **Max Output Current:** 15A
- **Dimensions (LxWxH):** 17 x 3.5 x 1.75 in
- **Weight:** 2.9 lb (Unit only) / 4.9 lb (Net)

FUNCTION

INTERFACE

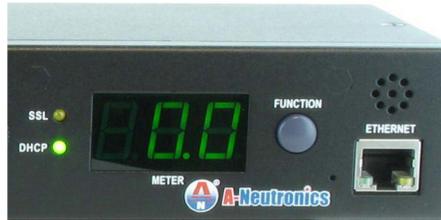

- 1 **Ethernet:** RJ45 port for network communication port.
- 2 **Audible Alarm:**
 - Warning- 1 beep in 1 second.
 - Overload- 3 beeps in 1 second.

NOTE: The audible alarm will keep beeping until the current returns to normal and the current is lower than the threshold of 0.5 amps.
- 3 **Function Button:**
 - Press and release to turn off the warning beep. The overload beeping can not be cancelled.
 - Hold the button and release after 1 beep. The meter will show the current information, *temperature and humidity in sequence.
 - Hold the button and release after 2 beeps. The meter will show the IP address.
 - Hold the button and release after 4 beeps. It will change the IP from DHCP or fixed IP.
 - Hold the button and release after 6 beeps. It will reset the PDU back to the factory setting.
- 4 **Meter:** 3 digits to display Current, IP Address and *temperature and humidity.
- 5 **ID:** The identification of power bank or PDU.
- 6 **LED Indicator:**
 - SSL (yellow): Light on means that web access is protected by SSL.
 - DHCP (green): Light on means that PDU gets the IP address through DHCP.
 - PDU (green): Indicated each output power status.
 - Status (red): Indicated each circuit status.
- 7 **ENV:** RJ11 for optional ENV probe attached to detect *temperature and humidity.
- 8 **Circuit Breaker:** Overload power protection.

INSTALLATION

RACK MOUNT INSTRUCTIONS

This section will provide quick instructions on how to install the PDU.

A. Elevated Operating Ambient: If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than the room ambient. Consideration should be given when installing the equipment in an environment compatible with the maximum ambient temperature specified by the manufacturer.


B. Reduced Air Flow: Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.

C. Mechanical Loading: Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.

D. Circuit Overloading: Consideration should be given to the connection of the equipment to the supply circuit in the effect that overloading of the circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

E. Reliable Grounding: Installation should be in accordance with all governing entities to include but not limited to your local electric code, etc.

DIAGRAM

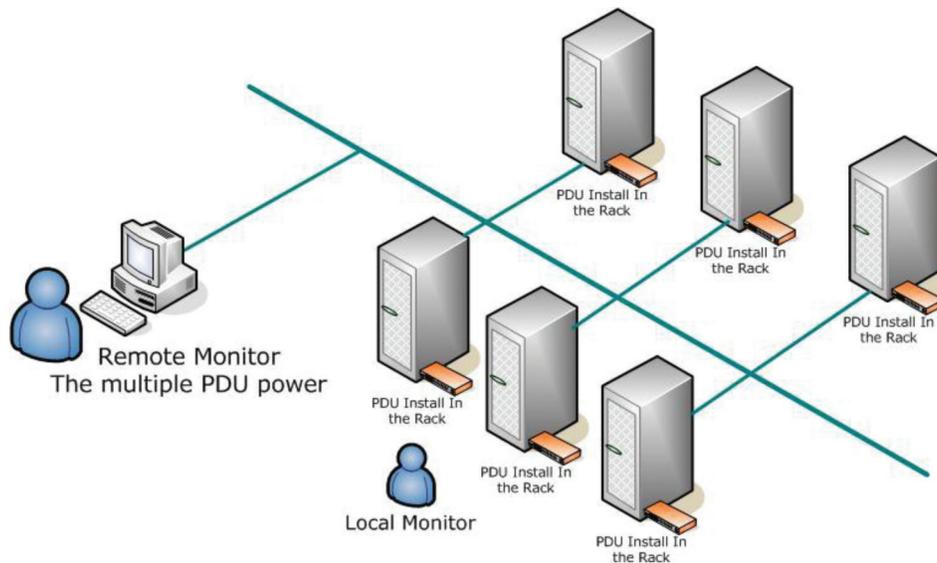

HARDWARE

1. Install mounting brackets.
2. The PDU comes with brackets for mounting in a rack. To mount the PDU into a rack perform the following procedure:
 - Attach the mounting brackets to the unit, using the four retaining screws provided for each of the brackets.
 - Choose a location for the brackets.
 - Align the mounting holes of the brackets with the notched hole on the vertical rail and attach with the retaining screws.
3. Connect input and output power.
4. Connect the Ethernet cable to the PDU.
5. Switch on the PDU.

NOTE 1: The default setting IP address is DHCP. If the PDU can not get the IP address from DHCP server, the IP address will stay at 192.168.0.216


WEB INTERFACE

LOGIN

Input the PDU IP address in web browser.

- User Name: snmp
- Password: 1234

NOTE: Screen shots for reference only. Actual prompts might vary slightly.

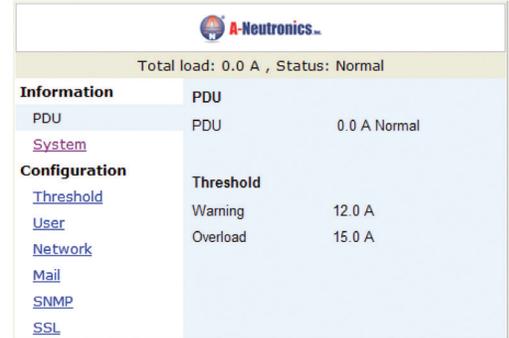


The screenshot shows the A-Neutronics web interface. At the top, it displays the logo and the text "Total load: 0.0 A , Status: Normal". Below this, there are two main sections: "Information" and "Configuration".

Information	
PDU	PDU
System	0.0 A Normal

Configuration	
Threshold	Warning
User	12.0 A
Network	Overload
Mail	15.0 A
SNMP	
SSL	

INFORMATION: PDU

Displays total PDU and each outlet power consumption.

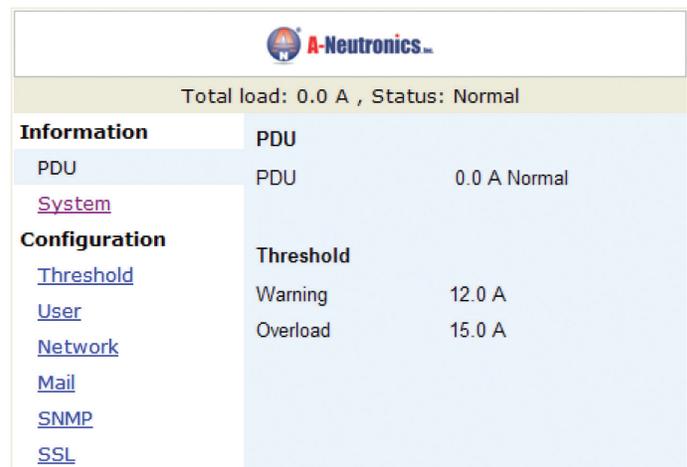

The screenshot shows the A-Neutronics web interface. At the top, it displays the logo and the text "Total load: 0.0 A , Status: Normal". Below this, there are two main sections: "Information" and "Configuration".


Information	
PDU	PDU
System	0.0 A Normal

Configuration	
Threshold	Warning
User	12.0 A
Network	Overload
Mail	15.0 A
SNMP	
SSL	

INFORMATION: SYSTEM

Indicates PDU system information, including:

- Model No.
- Firmware Version
- MAC Address
- System Name
- System Contact
- Location

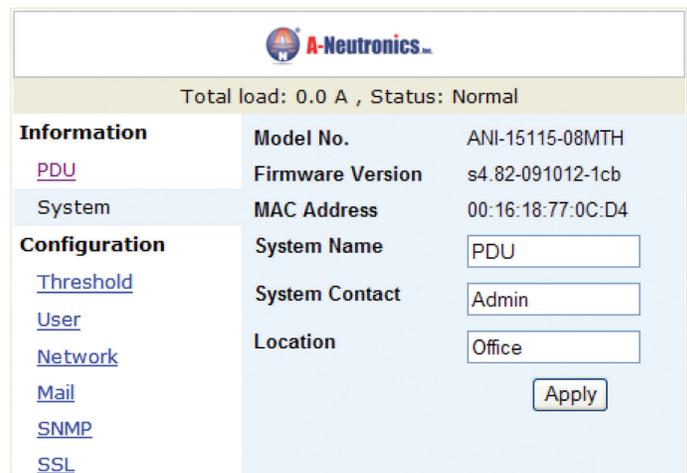

The screenshot shows the A-Neutronics web interface. At the top, it displays the logo and the text "Total load: 0.0 A , Status: Normal". Below this, there are two main sections: "Information" and "Configuration".

Information	
PDU	Model No.
System	ANI-15115-08MTH
	Firmware Version
	s4.82-091012-1cb
MAC Address	
00:16:18:77:0C:D4	

Configuration	
Threshold	System Name
User	System Contact
Network	Location
Mail	<input type="text" value="PDU"/>
SNMP	<input type="text" value="Admin"/>
SSL	<input type="text" value="Office"/>
	<input type="button" value="Apply"/>

WEB INTERFACE

CONFIGURATION: THRESHOLD

Set the warning and overload threshold for each circuit.

Set lower and upper thresholds for *temperature and humidity.

A-Neutronics

Total load: 0.0 A , Status: Normal

Information	Name	Threshold (Amp)	
		Warning	Overload
PDU	PDU	<input type="text" value="12"/>	<input type="text" value="15"/>

Configuration

- [Threshold](#)
- [User](#)
- [Network](#)
- [Mail](#)
- [SNMP](#)
- [SSL](#)

CONFIGURATION: USER

Change ID and password.

Default is:

- User Name: snmp
- Password: 1234

A-Neutronics

Total load: 0.0 A , Status: Normal

Information	Original
PDU	ID <input type="text"/>
System	Password <input type="text"/>

Configuration

- [Threshold](#)
- [User](#)
- [Network](#)
- [Mail](#)
- [SNMP](#)
- [SSL](#)

New

ID

Password

WEB INTERFACE

CONFIGURATION: NETWORK

PDU network information

- **Enable DHCP:** Changes the way to get the IP address for the PDU.

A-Neutronics

Total load: 0.0 A , Status: Normal

Information	IP Address
PDU	Host Name <input type="text" value="DIGIBOARD"/>
System	IP Address <input type="text" value="192.168.1.103"/>
Configuration	Subnet Mask <input type="text" value="255.255.255.0"/>
Threshold	Gateway <input type="text" value="192.168.1.1"/>
User	<input checked="" type="checkbox"/> Enable DHCP
Network	DNS Server IP
Mail	Primary DNS IP <input type="text" value="192.168.0.1"/>
SNMP	Secondary DNS IP <input type="text" value="192.168.0.1"/>
SSL	<input type="button" value="Apply"/>

CONFIGURATION: MAIL

When an event occurs, the PDU can send out an email message to a pre-defined account.

- **Email Server:** The Email Server only supports the domain name, not the IP address.
- **Sender's Email:** Input the senders email address.
- **Email Address:** Input the recipients email address.
The message in the email:
Indicate OutletA~H-XXXXXXXX status in order
X=0: means the power off
X=1: means the power on

NOTE: Make sure the DNS server can resolve the Email Server's domain name.

A-Neutronics

Total load: 0.0 A , Status: Normal

Information	Email Setting
PDU	Email Server <input type="text" value="mail.your.com"/>
System	Sender's Email <input type="text" value="sender@yourcom.com"/>
Configuration	Recipient's Email Address
Threshold	Email Address <input type="text"/>
User	<input type="button" value="Apply"/>
Network	
Mail	
SNMP	
SSL	

WEB INTERFACE

CONFIGURATION: SNMP

When an event occurs, the PDU can send out a trap message to a pre-defined IP address.

- **Trap Notification:** Set receivers IP for trap.
- **Community:** Set SNMP community.
Read Community is public and fixed.
Default Write Community is “public” and can be modified by the user.

A-Neutronics
Total load: 0.0 A , Status: Normal

Information
[PDU](#)
[System](#)

Configuration
[Threshold](#)
[User](#)
[Network](#)
[Mail](#)
SNMP
[SSL](#)

Trap Notification
Receiver IP:

Community
Read: **public**
Write:

CONFIGURATION: SSL

Enable SSL for web communication.

Users must input the correct ID and password to enable the SSL function. The ID and password must be the same as the “User” setting.

A-Neutronics
Total load: 0.0 A , Status: Normal

Information
[PDU](#)
[System](#)

Configuration
[Threshold](#)
[User](#)
[Network](#)
[Mail](#)
[SNMP](#)
SSL

Enable SSL

Confirmation
ID:
Password:

THIS PAGE IS INTENTIONALLY LEFT BLANK.

LIMITED WARRANTY

This Warranty is given ONLY to purchasers who buy for commercial or industrial use in the ordinary course of each purchaser's business.

General:

A-Neutronics, Inc. products are in our opinion the finest available. We take pride in our products and are pleased that you have chosen them. Under certain circumstances we offer with our products the following three (3) year Warranty against Defects in Material and Workmanship. Please read your Warranty carefully. This Warranty sets forth our responsibilities in the unlikely event of defect and tells you how to obtain performance under this Warranty.

TWO YEAR LIMITED WARRANTY AGAINST DEFECTS IN MATERIAL AND WORKMANSHIP

A-NEUTRONICS, INC. PRODUCTS COVERED: ANI-17015ASUR Series

Terms of Warranty:

As provided herein, the A-Neutronics, Inc. product is warranted to be free of defects in material and workmanship for a period of three (3) years from the date of delivery of the product to User. The delivery date will be determined only from the A-Neutronics, Inc. bill of lading. If any of the A-Neutronics, Inc. products fails to conform to the warranty within the warranty period, A-Neutronics, Inc., at its option, will furnish new or factory remanufactured parts for repair or replacement of that part. Warranty Extends to First Purchaser for Use, Non-transferable:

This Warranty is extended to the first person, firm, association or corporation for whom the A-Neutronics, Inc. product specified herein is originally installed for use in the United States (the "User"). This Warranty is not transferable or assignable without the prior written permission of A-Neutronics, Inc.

Assignment of Warranties:

A-Neutronics, Inc. assigns to User any warranties which are made by manufacturers and suppliers of components of the A-Neutronics, Inc. product and which are assignable, but A-Neutronics, Inc. makes NO REPRESENTATIONS as to the effectiveness or extent of such warranties, assumes NO RESPONSIBILITY for any matters which may be warranted by such manufacturers or suppliers and extends no coverage under this warranty to such components.

Descriptions:

A-Neutronics, Inc. warrants for the period and on the terms of the Warranty set forth herein that the A-Neutronics, Inc. product will conform to the descriptions contained in A-Neutronics, Inc. final invoices, orders and A-Neutronics, Inc. product brochures. A-Neutronics, Inc. does not control the installation and use of any A-Neutronics, Inc. product. Accordingly, it is understood that the Descriptions are NOT WARRANTIES OF PERFORMANCE and NOT WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE.

Obtaining Performance Under This Warranty:

Within a reasonable time, but in no case to exceed thirty (30) days, after User's discovery of a defect, User shall contact A-Neutronics, Inc. and request a return authorization number. User shall ship the product, with proof of purchase, to A-Neutronics, Inc. freight prepaid. A-Neutronics, Inc. products shipped to A-Neutronics, Inc. without a return authorization number will be refused and returned freight collect to User at User's expense. A-Neutronics, Inc. products shipped by User to A-Neutronics, Inc. which have incurred freight damage due to User's improper packaging of the product will not be covered by this Warranty and any repairs or replacement parts, components or products needed will be invoiced in the full current price amount and returned freight collect to User.

Subject to the limitations specified herein, A-Neutronics, Inc. will repair or replace, at its option, without charge for A-Neutronics, Inc. labor or materials, subsequent to its inspection and F.O.B. A-Neutronics, Inc. facility, the A-Neutronics, Inc. product shipped to A-Neutronics, Inc. with a return authorization number and warranted hereunder which does not conform to the Warranty. Replacement parts, components or products shipped to User prior to A-Neutronics.

END OF DOCUMENT